

# SLICE-QTC Four-Channel Temperature Controller

Model No. SLICE-QT and SLICE-QTC

Document Revision: 1

Document Last Updated on 2024/10/03 17:30

Please read [Limited Warranty](#) and [General Warnings and Cautions](#) prior to operating the SLICE-QTC.

## Links

Click here for the [SLICE-QTC Quick Start Guide](#).

Click here for the [SLICE-QTC Serial API Guide](#).

Click here for the [Ziegler-Nichols loop tuning instructions](#).

Click here for the [SLICE-QTC web page](#).

Click here for the [Github page for SLICE-QTC firmware revisions](#)

Please check back for added functionality. Contact [sales \[at\] vescent \[dot\] com](mailto:sales@vescent.com) for questions and corrections, or to request added functionality.

## Description

The SLICE-QTC is a high-precision temperature controller (see [figure 1](#)). It will control up to four thermal plants with sub-millikelvin precision.

Fig. 1: The SLICE-QTC



## Purchase Includes

- SLICE-QTC Temperature Control Unit
- AC power cord with appropriate wall plug for you location (if known)
- Four single-ended 6-ft control cables<sup>1)</sup>
- Final Test Documentation

# Absolute Maximum Ratings and Power Input

Note: All modules designed to be operated in a laboratory environment.

| Parameter                     | Rating          |
|-------------------------------|-----------------|
| Environmental Temperature     | >15°C and <30°C |
| Environmental Humidity        | <60%            |
| Environmental Dew Points      | <15°C           |
| Maximum AC Line Input Current | 2 A             |

Tab. 1: Absolute Maximum Ratings

The SLICE-QTC will accept input line voltages within the ranges shown in [table 2](#).

| Parameter                           | Value          | Units |
|-------------------------------------|----------------|-------|
| Input Line Voltage                  | 100-240        | VAC   |
| Frequency                           | 50-60          | Hz    |
| Phase                               | 1 phase        |       |
| User-serviceable fuse <sup>2)</sup> | T 2.0 A L 250V |       |

Tab. 2: Input Voltage Specifications

## Proper Usage



If this instrument is used in a manner not specified by the manufacturer in this manual or other relevant literature, protection provided by the instrument may be impaired.

Successful implementation of the SLICE-QTC depends critically on the design of the whole system: controller, transducer, plant, and sensor.

### Tips for Successful Temperature Regulation

1. The transducer, plant, and sensor must all be in good thermal contact. Use thermal paste or epoxy to avoid air gaps between a TEC or heater and the body of the plant as well as to secure the thermistor to the plant.
2. Know the electrical limits of of your transducer and set the limits of the SLICE-QTC accordingly. Each channel can provide up to 6 A or 20 W of power with a maximum compliance voltage up to ~18 V. Choose transducers that work within these limits. Using the current, power, and/or voltage ratings of your transducer to calculate loads on individual channels and set limits appropriately in the CH X > Settings > Load Limits window.
3. Maintain proper shielding of the control cable, but avoid ground loops between the SLICE-QTC and the plant. In most cases this means extending the foil shield in the cable to as close as possible to the plant without electrically connecting the SLICE-QTC to the plant.

**WARNING:** Do not connect any of the SLICE-QTC DIN connector pins (TEC+, TEC-, Rth+, Rth-) to earth ground. Doing so will result in



nonconforming operation and may cause permanent damage to the instrument.

List of Symbols

|  |                                                                                                                                                               |
|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Warning. Pay special attention to procedures and notes. If procedure is not followed carefully, damage to the SLICE-QTC or devices connected to it may occur. |
|  | Potential for electrical shock hazard.                                                                                                                        |
|  | Do not connect indicated port to earth ground. Doing so will result in nonconforming operation and may cause permanent damage to the instrument.              |

Specifications

| Performance <sup>3)</sup> |                                                           |
|---------------------------|-----------------------------------------------------------|
| Parameter                 | Value                                                     |
| Channels                  | 4                                                         |
| Loop Filter               | PID, adjustable corners and proportional Gain             |
| Control Range             | -20 to +120°C <sup>4)</sup>                               |
| Compatible Transducer     | TEC or resistive heater                                   |
| Compatible Sensor         | NTC thermistor <sup>5)</sup>                              |
| Temperature Stability     | ±0.2 mK over 10 min <sup>6)</sup>                         |
| Precision                 | ±0.2 mK                                                   |
| Control Capacity          | 40 W total <sup>7)</sup><br>20 W max for a single channel |
| Current Capacity          | 6 A per channel <sup>8)</sup>                             |
| Compliance Voltage        | ≤18 V <sup>9)</sup>                                       |
| Input & Output            |                                                           |
| I/O Voltage Range         | ±10 V                                                     |
| Triggering                | TTL                                                       |
| Control Interface         |                                                           |
| Control                   | Front-panel touch screen, Serial API                      |

Tab. 3: Specifications of SLICE-QTC

## Extendable Legs

The SLICE-QTC has four extendable legs (figure 2). Extending the front legs allows easy viewing from above (figure 1) and extending the rear legs (figure 3) allows easy viewing from below.

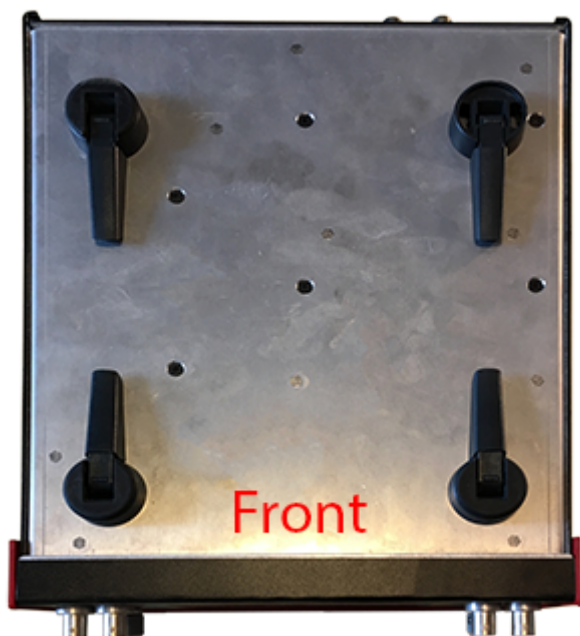


Fig. 2: Underside of SLICE-QTC



Fig. 3: Side view of SLICE-QTC configured for viewing from below

## Front Panel

An image of the front panel is shown in figure 4. The functions and connections are as follows:

1. Parameter input adjustment knobs
2. Control signal inputs
3. Signal monitor outputs
4. Touch screen with view of CH 2 Details screen
5.  $\Delta T$  plotted as a function of time (blue line)
6. System locked range (yellow dashed lines)

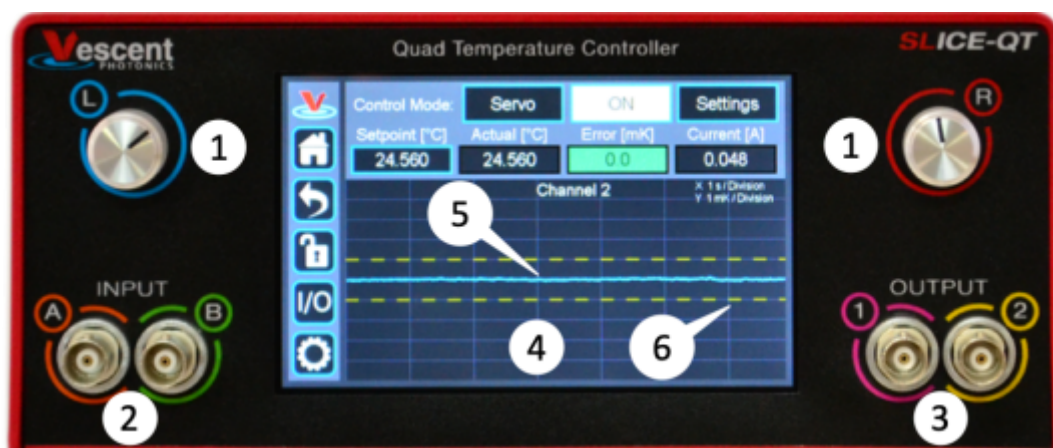


Fig. 4: Front of SLICE-QTC

## Rear Panel

An image of the rear panel is shown in [figure 5](#). The functions and connections are as follows:

- 1. Main On/Off power switch
- 2. AC line power in<sup>10)</sup>
  - 1. User-serviceable fuse (T 2.0 A L 250V)
- 3. Output trigger (BNC)
- 4. Input trigger (BNC)
- 5. USB port (Type B)
- 6. Connections to thermal plants (4-pin DIN)<sup>11)12)</sup>

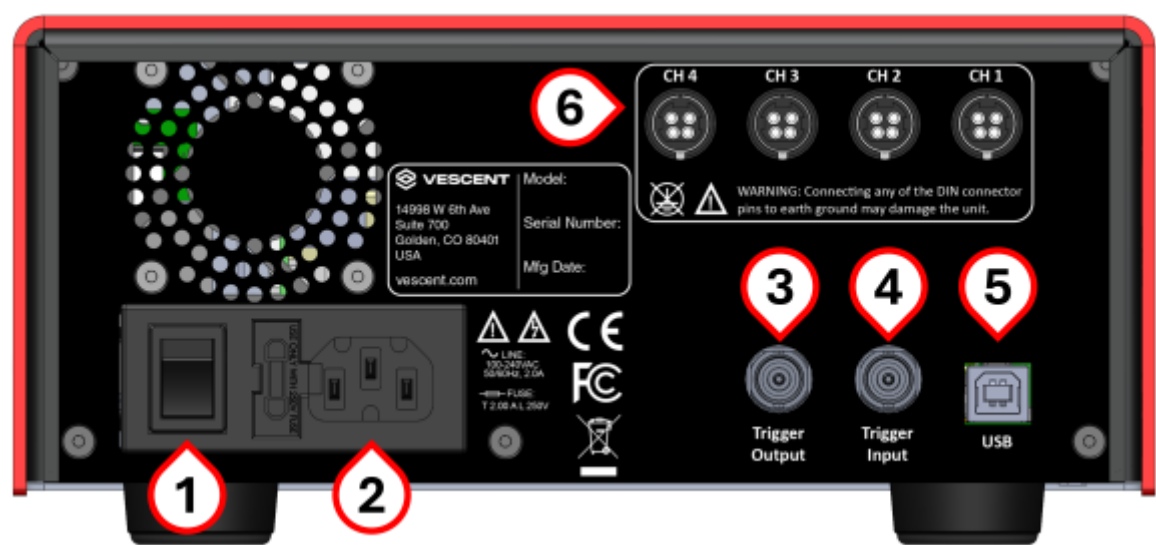


Fig. 5: View of rear of SLICE-QTC

## Interface Connections

Connections to the thermal plants are made from the rear panel. Four cables for this purpose are provided with the SLICE-QTC. Each has one end terminated with a [CUI Inc. PDP-40 connector](#) for connecting to the [CUI Inc. CP-7240-ND connector](#) on the SLICE-QTC. The other end is unterminated and is for connecting to your specific plant. The pin out for connecting the cable ([Beldon 1502R 010500](#)) to your specific plant is given in [table 4](#).

| Connector Pin Number | Color         | Function           | AWG |
|----------------------|---------------|--------------------|-----|
| 1                    | Red           | TEC/Heater+        | 18  |
| 2                    | Black         | TEC/Heater-        | 18  |
| 3                    | White         | Thermistor+ (Rth+) | 22  |
| 4                    | Blue          | Thermistor- (Rth-) | 22  |
| Metal Sleeve         | Ground Shield |                    | 24  |

Tab. 4: Cable pinout



**WARNING:** Do not connect any of the SLICE-QTC DIN connector pins (TEC+, TEC-, Rth+, Rth-) to earth ground. Doing so will result in nonconforming operation and may cause permanent damage to the instrument.



Do not have servo loop engaged when connecting Servo Output to your plant.



Use caution grounding the shield (drain) at the transducer end of the interface cable as ground loops may be formed, degrading performance. Consider floating the plant or not connecting the shield to the plant chassis.

You may purchase more cables separately from Vescent. We do not recommend making cables, but if you do so, make sure the metal sleeve is well connected to the connector ground to provide proper shielding to the signal cables.

## Operating the SLICE-QTC

### Screen Navigation

When presented with a given view, it is possible to select the functionality or edit the values in a field bordered in blue. When a particular field is actively being edited, its border will change to yellow. The Home Screen of the SLICE-QTC is shown in [figure 6](#). From the Home screen, summary control over the four channels is possible, including setting  $T_{setr}$ , initiating lock, or entering an individual channel's Detail screen.

In general, the status displayed in an editable field is the current status (not the result of touching the button). Touch the field to select a new value/status. For instance, in [figure 6](#) all of the channels are in stand by. Touching the OFF button to initiate servo control over a plant will change this button to read ON ([figure 17](#)).



Fig. 6: Home screen of SLICE-QTC

To navigate away from a menu, it is typically necessary to press the escape button found on that menu. However, certain drop downs without a escape button, such as those found in the Auto Tune process, can be closed by touching anywhere on the screen outside of the menu. In general, if the menu has a escape button on it, the escape button must be pressed to exit the menu.

Control Bar

On the left edge of the screen is the Control Bar. At any given time, these buttons will have the following effect.

Home Button



Fig. 7: Home button Returns to [Home screen](#) (figure 6).

Back Button



Fig. 8: Back button Returns to previous screen. Changes will be lost if not accepted before using the Back button.

Lock Button



Fig. 9: Lock button (shown in unlocked mode) Locks out further modification of parameters. Touch to lock or unlock parameter entry. It is still possible to engage the temperature control loops when system is locked, but it is not possible to change the set point temperature or loop parameters, etc.

## I/O Button



Fig. 10: I/O button Enters the screen for programming the [front-panel I/O](#).

## System Settings Button



Fig. 11: System settings button Enters screen for [system control settings](#) (brightness, volume, etc.).

## Entering Values

In order to afford maximum resolution, the least significant digit will not necessarily change to precisely your target value and will be coerced to the nearest acceptable value, which is limited by the digitization scheme for the set point. For instance, you may select a set point temperature of 17.000°C, but the closest allowed digitized value may be 16.999°C.

In most instances, there are two methods for entering parameter values: the physical rotary knobs on the front panel and the pop-up keypad on the touch screen. When using the knobs to change the value of a parameter, changes take effect immediately. When using the keypad, changes do not take effect until the enter key is depressed.

### Rotary Knobs

If you touch an editable field for a brief moment, a cursor will appear under one of the digits of the parameter value. By turning the right knob, it is possible to increase (cw) or decrease (ccw) the value of the underlined digit. Turning the left knob will change which digit is editable (cw to move to the right and ccw to move to the left).

### Keypad

If you touch and hold an editable field such as the set point temperature, a numeric keypad will

appear as seen in figure 12. You can enter in the full value of the desired parameter with this keypad.

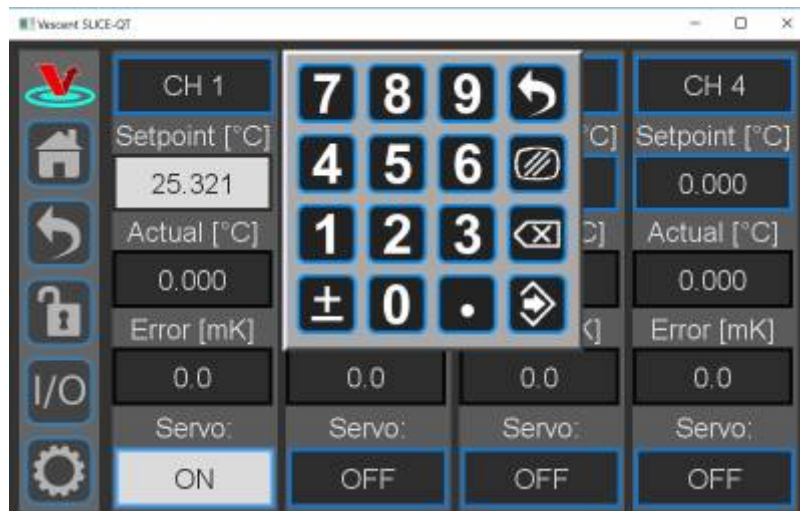


Fig. 12: Pop-up Keypad

The action initiated by each button is described below.

#### Escape

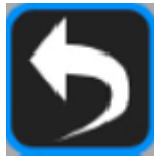


Fig. 13: Escape button Exits keypad without accepting changes.

#### Clear



Fig. 14: Clear button Clears value in field being edited.

#### Delete



Fig. 15: Delete button Deletes last character entered.

#### Enter



Fig. 16: Enter button Accepts edits and exits keypad.

Home Screen

The Home screen summarizes the status of all four channels (figure 6). The data for each channel is arranged vertically. At a glance, for each channel,  $T_{set}$ ,  $T_{act}$ , and  $\Delta T$  can be read, as well as whether servo control is engaged. If the loop is engaged and  $\Delta T$  is smaller than a user-defined range, the Error value field will be green, indicating a locked state. If  $\Delta T$  is outside this user-defined range, this field will turn yellow.

Setting the Temperature

To set the temperature set point from the home screen, touch the Setpoint window for the desired channel (circled in red for CH 1 in figure 17). A long touch will cause a keypad to appear. Enter desired value and touch the accept button.

A short touch will highlight the Setpoint window in yellow (figure 18). Use rotary knobs to select digit to edit (left knob) and value for digit (right knob).

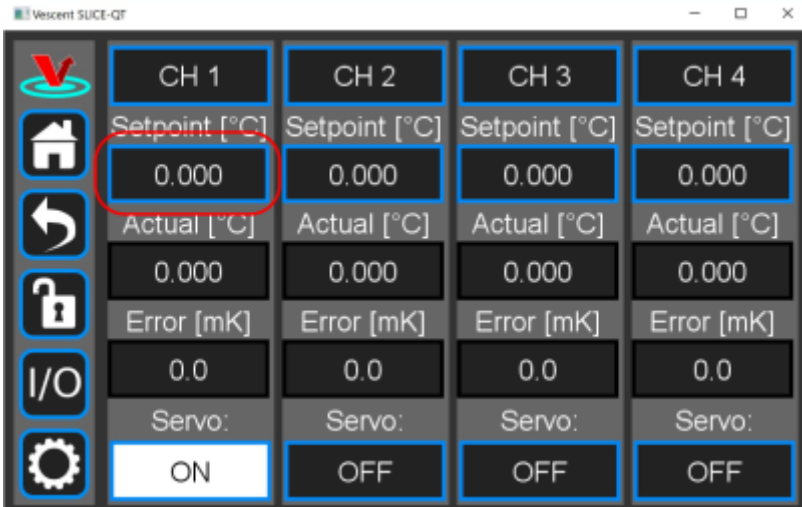


Fig. 17: Select Temperature setpoint for CH 1



Fig. 18: Knob adjustment of Temperature setpoint for CH 1

### Enabling Feedback

Touch the OFF button at the bottom of the column for the desired channel. The button will turn white and read ON to indicate the SLICE-QTC is actively controlling the temperature for that channel. PID settings may still need to be input for the SLICE-QTC to servo plant temperature correctly. In [figure 17](#) and [figure 18](#) CH 1 is active and CHs 2-4 are inactive.

As the system approaches lock, it will display  $\Delta T$  on a yellow background. When the system is locked (as defined by the user in the CH X > Settings > Limits screen) the Error window will display  $\Delta T$  with a green background.

### Channel Detail Screen

You can set how individual channels behave in the Channel Detail screen. To enter a Channel Detail screen from the Home screen, touch the CH button for the appropriate channel ([figure 6](#)). [figure 21](#) shows the CH 1 Detail screen. From this screen, you can change  $T_{set}$ , and initiate temperature control as from the Home screen. You can also visually monitor the performance of the loop. When the lock is engaged, the graph in the lower right of the screen displays  $\Delta T$  ( $T_{act} - T_{set}$ ) on a rolling basis. The yellow dashed lines indicate the user-defined “lock range” (see [figure 24](#)). In [figure 21](#), the lock range is set to  $\pm 3$  mK. If  $\Delta T$  is outside of this range, the Error field background will change from green to yellow.

- Change the speed of the rolling display: touch the  button and select from 1 to 20 s/div.
- Change the scale of the vertical axis: touch the  button and select from 1 mK/div to 10 K/div.
- Pause and restart the rolling screen: touch the  button.
- Turn on & off cursors on the graph: touch the  button. It is possible to drag the cursors across the display of  $\Delta T$  to measure an oscillation period. This function will be helpful when tuning the loop parameters to your plant.

Adjusting the Graph

To adjust the vertical range ( $\Delta T$ ) of the graph, either touch the  button and select an option from the pop-up menu ([figure 19](#)), or turn the right rotary knob.

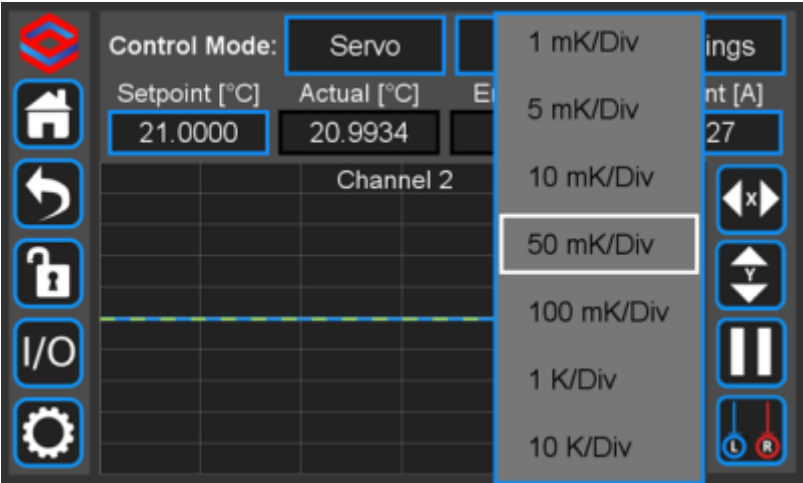


Fig. 19: Menu to adjust y-axis on temperature plot

To adjust the time base ( $\Delta t$ ) of the graph, either touch the  button and select an option from the pop-up menu ([figure 20](#)), or turn the left rotary knob.

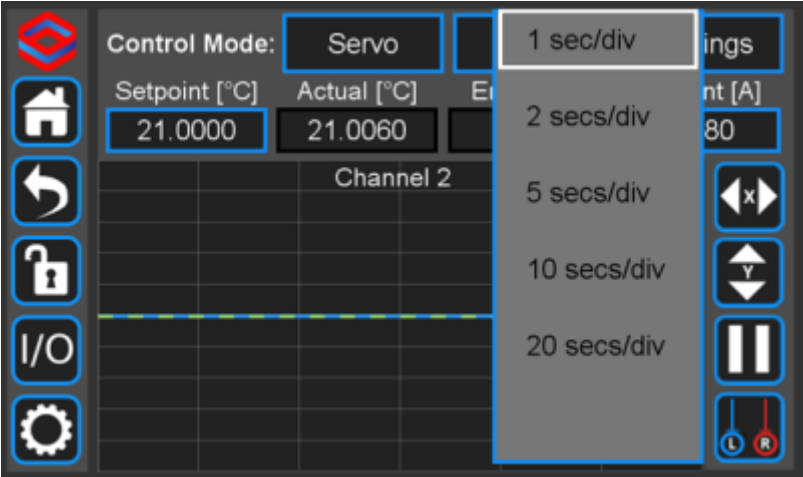


Fig. 20: Menu to adjust x-axis on temperature plot

Display of Transducer Current, Voltage, and Power

As shown in [figure 21](#), the current being delivered to the transducer is displayed in the blue box on the right margin labeled Current [A]. If you touch the blue box, the box will rotate through displaying current through, voltage across, and power delivered to the transducer.

From this screen, you can also set the various parameters for how the loop will behave.

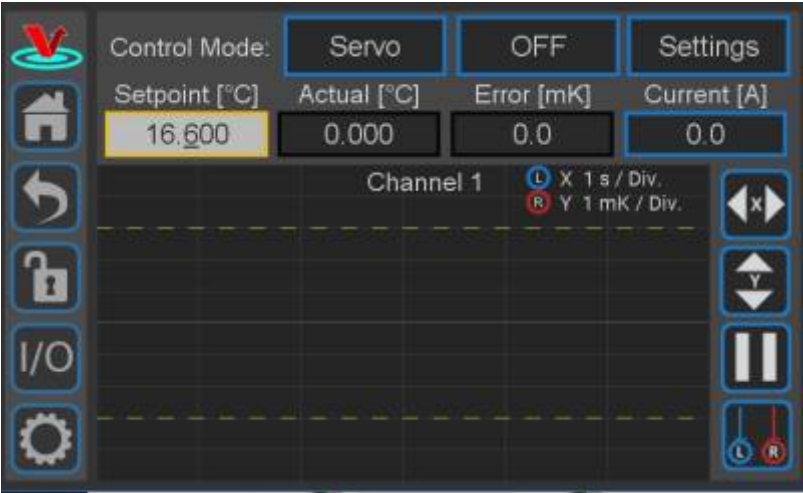


Fig. 21: Initial view of CH 1 Detail screen

Setting Control Modes

Touch the Settings button in the top right of the window. The sub-menu shown in figure 22 will appear.

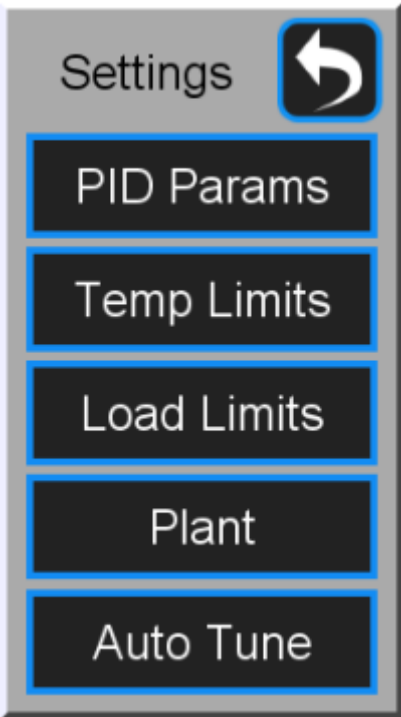


Fig. 22: Menu of settable parameters

Channel Settings

PID Filter and Slew Rate Adjustment

PID Settings

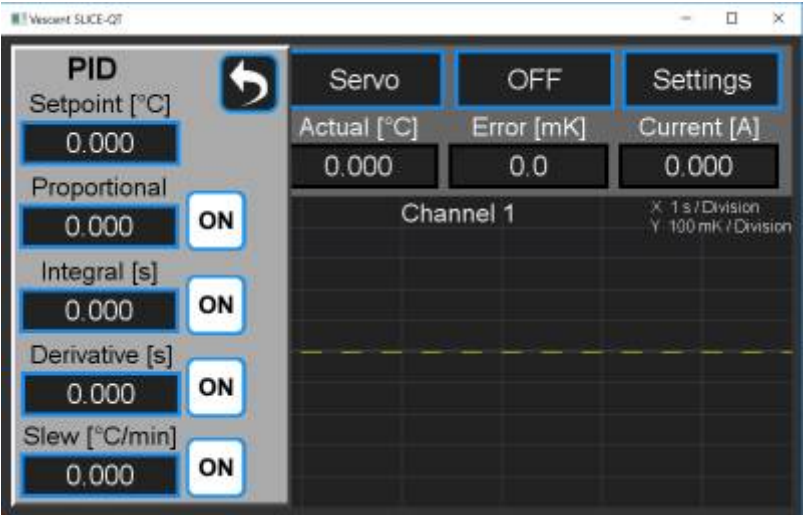


Fig. 23: Screen for adjusting PID parameters for individual channel

To set the PID loop filter parameters from the Home screen, select CH X > Settings > PID Params and the screen in [figure 23](#) will appear. The parameters for the PID loop filter are set in this popup screen. These parameters control the closed-loop behavior of the feedback. Each of these parameters will need to be tuned specifically for your plant, either manually or with the [Auto Tune](#) feature. There are a number of methods to tune a loop. We recommend the Ziegler-Nichols method.<sup>13)</sup> [Instructions on using this method can be found here](#). There is also an option to enable or disable each parameter in the loop filter.

Slew Rate Limit

For applications where the rate of change of the temperature of the plant needs to be controlled, it is possible to set an upper limit on the slew rate. This can also be done through the PID Params screen.

|              |        |                                                       |
|--------------|--------|-------------------------------------------------------|
| Setpoint     | °C     | Sets the setpoint temperature of the plant.           |
| Proportional | V/V    | Sets the proportional gain of the loop filter.        |
| Integral     | sec    | Sets the integral time constant of the loop filter.   |
| Derivative   | sec    | Sets the derivative time constant of the loop filter. |
| Slew (Rate)  | °C/min | Sets the maximum slew rate for the plant temperature. |

Tab. 5: Setting loop parameters



If appropriate, make sure to turn the Slew Rate Limit off when changing use case!

Maximum & Minimum Temperature, Lock Range

Set Maximum & Minimum Temperature

The maximum and minimum allowable temperatures ( $T_{\text{max}}$  and  $T_{\text{min}}$ ) can be set as well as the range of  $\Delta T$  where the system is considered to be locked. From a Channel Detail screen (figure 21), tap Settings > Temp Limits and the screen in figure 24 will appear. It is advised to set  $T_{\text{min}}$  above the dew point temperature for your ambient conditions to avoid condensation on your plant surface. If the temperature of the plant exceeds the range set by  $T_{\text{max}}$  and  $T_{\text{min}}$ , the temperature will be displayed in a flashing red field.

Set Lock Range

In the view shown, the lock range has been defined to be  $\pm 3$  mK. If  $-3 \text{ mK} \leq \Delta T \leq +3 \text{ mK}$ ,  $\Delta T$  will be displayed on a green field. If outside this range,  $\Delta T$  will be displayed on a yellow field. The graph in the bottom right of the Channel Detail screen plots  $\Delta T$  vs. time. The dashed yellow lines on this plot represent the lock range limits as set in this screen.

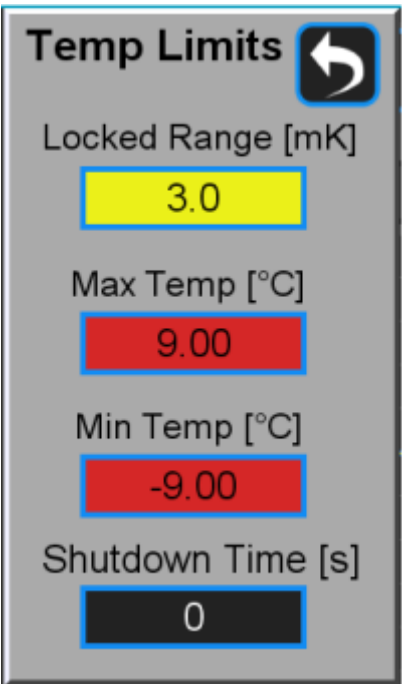


Fig. 24: Menu for setting absolute extrema and lock range

|              |                                                                                                                                                                                                                                                                                                                           |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Locked Range | Defines the nominal operating temperature range for the plant. When the actual temperature is within this window ( $\pm$ value), the temperature error will be displayed on a green background. When the error in the temperature is outside this window, the temperature error will be displayed on a yellow background. |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|               |    |                                                                                                                                                                                                                                                                           |
|---------------|----|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Maximum Temp  | °C | Sets the maximum and minimum operating temperatures of the plant. The user will be prevented from adjusting the setpoint temperature to outside this range. If the actual temperature exceeds this range, the temperature will be displayed on a flashing red background. |
| Minimum Temp  | °C |                                                                                                                                                                                                                                                                           |
| Shutdown Time | s  | Sets the delay between when the temperature goes out of range and when the SLICE-QTC shuts the current off.                                                                                                                                                               |

Tab. 6: Warning and Max/Min



If your plant is exposed to the atmosphere, use an abundance of caution in setting  $T_{min}$  below the dew point for your ambient conditions! Water will condense on surfaces that are below the dew point temperature.

Power Limits

The User can limit the control power available to individual channels. To adjust control capacity from the Home screen, select CH X > Settings > Load Limits and the screen shown in figure 25 will appear.

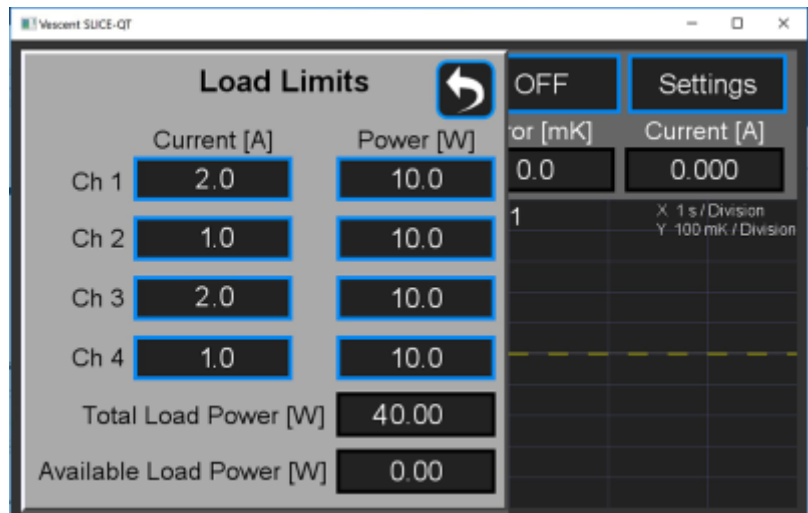


Fig. 25: Screen for adjustment of control power capacity

Transducer and Thermistor

To set the properties of the transducer (TEC or heater) and thermistor for an individual channel from the Home screen, touch CH X > Settings > Plant. The menu in figure 26 will appear. Select TEC/Bipolar (as seen) or select Heater/Unipolar by touching the TEC/Bipolar button to toggle between the two.

From this screen, it is also possible to set the polarity of the TEC. Touch Polarity Positive/Polarity Negative to toggle between the two states. The polarity is already set correctly to NEGATIVE for use with NTC thermistors.

The thermistor data has been configured at the factory for a typical NTC thermistor that is 10 kΩ at 25°C. Only NTC (Negative Thermal Coefficient) thermistors can be used. You can enter a new Beta

value, reference temperature, and resistance value and the Steinhart-Hart constants will be calculated automatically or vice versa.

NOTE: The SLICE-QTC can achieve sub-millikelvin stabilities over a very wide set point temperature range. For most applications working near room temperature, an NTC thermistor with a nominal value of 10 k $\Omega$  at 25°C will work fine. For temperatures far from room temperature, best results will occur by choosing a thermistor that has a resistance of 10 k $\Omega$  at your desired set point temperature. The input bridge circuitry is configured to have maximum sensitivity at a 10-k $\Omega$  resistance.

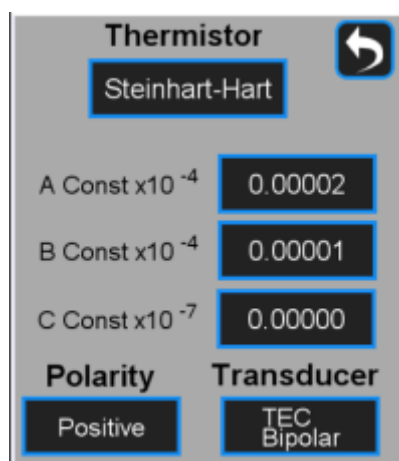


Fig. 26: Set Thermistor and Plant Information



WHEN USING A RESISTIVE HEATER, be sure to set the transducer type (CH X > Settings > Plant) to Heater/Monopolar. If set to TEC/Bipolar, attempts by the SLICE-QTC to actively cool your plant will result in a thermal runaway condition.

## Front-panel Inputs & Outputs

The front panel of the SLICE-QTC has two analog inputs (channels A & B) and two analog outputs (channels 1 & 2, not to be confused with the temperature control channels) available for use. The two analog outputs can be configured to output useful monitor signals, while the two analog inputs can be configured to provide additional functionality. A schematic of the input and output functionality is shown in [figure 29](#), with the light blue boxes indicating the front panel I/O. The voltage range of the analog I/O on the SLICE-QTC is  $\pm 10$  V.

To program the functionality of the front panel I/O, from any screen, touch the I/O icon on the left sidebar. You will be presented with the screen shown in [figure 27](#).

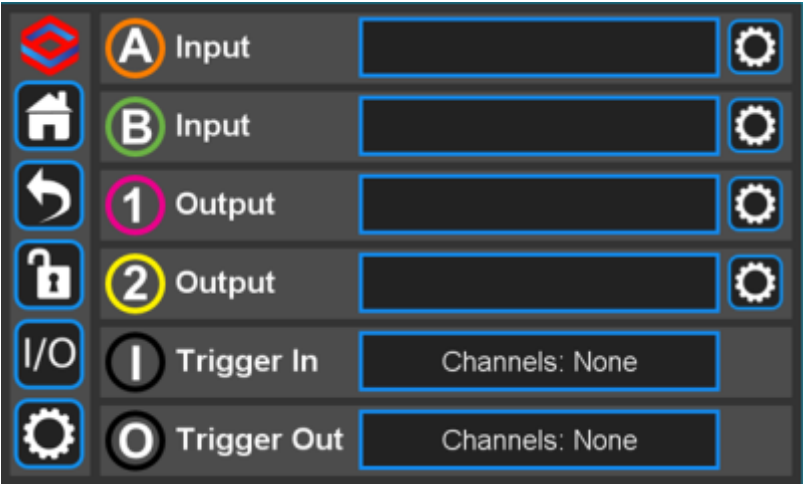


Fig. 27: Programming the front-panel I/O

Touch the blue-framed window to the right of the I/O channel you wish to program. Upon doing so, you will be presented with a pull-down menu of the various options available for that channel. For instance, if you select channel A input, you will be presented with the screen shown in figure 28. You can select the input to be any of the signals shown in table 7 for any of the four temperature-control channels.

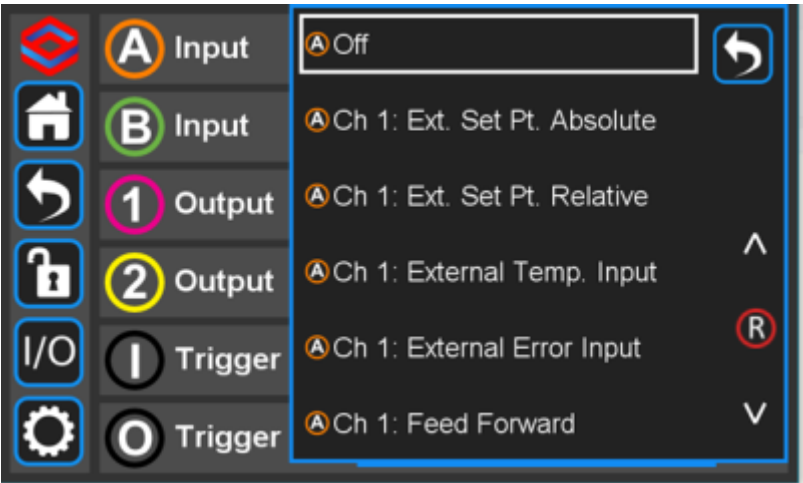


Fig. 28: Programming the input on Channel A Input

Each selected function for inputs and outputs will have settings that you can adjust, specific to the chosen functionality. To access these settings, select the Settings (“gear”) icon that is just to the right of the selection window. A pop-up window will be presented that displays the various settings that can be adjusted for that feature.

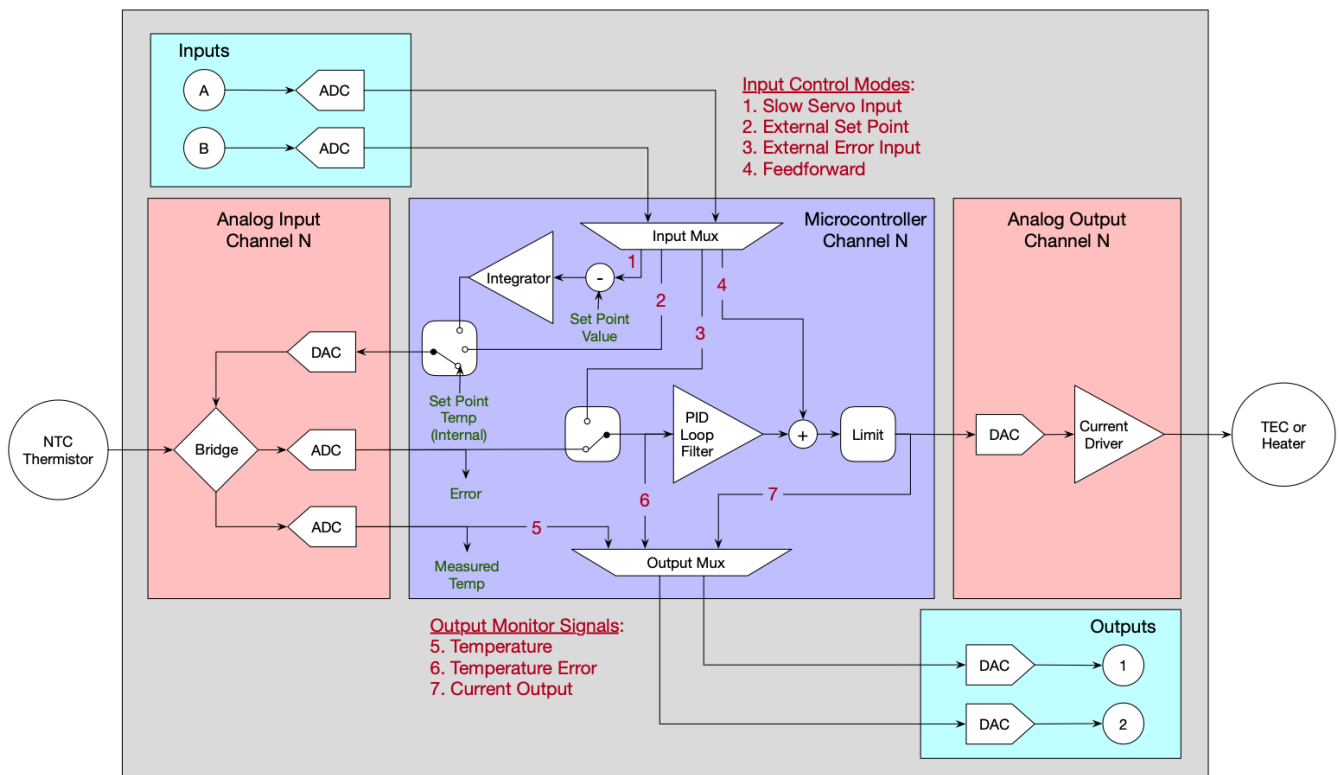


Fig. 29

## Input Channels A & B

### External Set Point

In this mode, an external signal can be used to supply the set point temperature of the plant. The set point temperature is related to the input voltage ( $V_{in}$ ) by:  $\text{Set Point Temp } [^{\circ}\text{C}] = \text{Gain } [^{\circ}\text{C/V}] \times V_{in} + \text{Offset } [^{\circ}\text{C}]$ . Touch the Settings icon to the right of the channel selection to adjust the Gain and Offset. This mode comes with both an absolute, and relative option, which can be selected separately through the I/O menu.

### External Temperature Input

This mode allows a bypass of the temperature read from a thermistor on a plant to use a temperature from a device that generates voltage as a function of temperature. The temperature is related to the input voltage ( $V_{in}$ ) by:  $\text{Temperature } [^{\circ}\text{C}] = \text{Gain} \times V_{in} + \text{Offset}$ . Touch the Settings icon to the right of the channel selection to adjust the Gain and Offset.

### External Error Input

This mode allows the temperature error to be derived from an external temperature transducer. In this mode, the thermistor and associated signal processing electronics are not used. The temperature error is related to the input voltage  $V_{in}$  by:  $\text{Temperature Error } [^{\circ}\text{C}] = \text{Gain } [^{\circ}\text{C/V}] \times V_{in} + \text{Offset } [^{\circ}\text{C}]$ . Touch the Settings icon to the right of the channel selection to adjust the Gain and Offset.

Feedforward

This mode allows a feedforward signal to be summed into the output of the PID loop filter. The feedforward signal current is related to the input voltage  $V_{in}$  by:  $\text{Feedforward Current [A]} = \text{Gain[A/V]} \times V_{in} + \text{Offset[A]}$ . Touch the Settings icon to the right of the channel selection to adjust the Gain and Offset.

Slow Servo Input

In some use cases, it is convenient to have the temperature set point automatically adjusted to keep another external parameter (which depends on temperature) at a certain value. For instance, the frequency of a laser might be controlled by adjusting the cavity length via a piezoelectric transducer (PZT). Over time, the cavity length may drift outside the range of the PZT, causing the laser to unlock. In this case, the laser cavity might have its temperature automatically adjusted so as to center the PZT voltage in the middle of its operating range.

When this mode is active, the input signal is compared with a set point voltage (settable by the user) to derive an error signal that is input to a single integrator loop filter. The output of the integrator automatically adjusts the the temperature set point to maintain the input voltage signal at set point voltage. When the slow servo is enabled for a channel, the temperature setpoint field for that channel on the home screen will be highlighted blue, as shown in (figure 30).



Fig. 30: Slow Servo enabled on channel 1

The setpoint temperature of the slow servo channel can still be adjusted, by touching the Setpoint [°C] field. To adjust the slow servo settings, press and hold on the blue Setpoint [°C] Field. This will bring up the slow servo menu as shown in (figure 31).



Fig. 31: Slow Servo menu showing adjustable parameters

This can be done either from the home screen or the single channel summary menu. Gain, polarity, and setpoint can also be adjusted from the I/O menu by pressing the “gear” icon next to the A or B input where the slow servo is enabled.

| Choice               | Comment                                                                      |
|----------------------|------------------------------------------------------------------------------|
| Off                  | Value not read                                                               |
| External Set Point   | Externally control the set point temperature                                 |
| External Temp Input  | Alternate input path for plant temperature                                   |
| External Error Input | Alternate input path for error signal (bypasses wheatstone bridge)           |
| Feed Forward         | Sums input value with loop filter output.                                    |
| Slow Servo Input     | Input is routed through an integrator and then used to control the set point |

Tab. 7: Front-panel input signals

Output Channels 1 & 2

Similarly, you can program the output signals for the Output Channels 1 and 2. For each channel, the actual (measured) temperature, the temperature error, or the current output can be chosen as the output signal. For instance, if you select Channel 1 Output from figure 27 you will be presented with figure 32. You can choose any value from table 8 to be delivered to the Channel 1 Output output on the front panel. Touch the Settings icon to the right of the channel selection to adjust the Gain and Offset for these output signals as in figure 33. When porting the Temperature of a given loop to an Output, setting the Gain equal to 0.1 V/°C and the offset to 0 V will give a convenient 2 V output at 20°C.

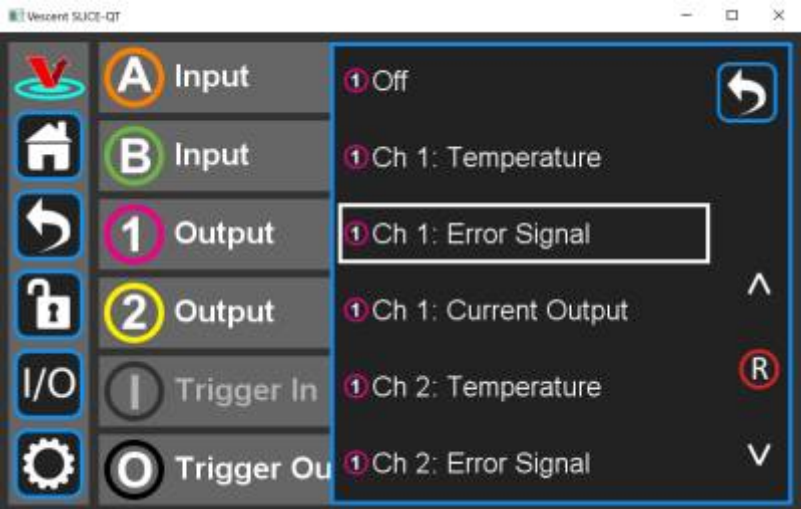


Fig. 32: Programming the output on Channel 1 Output

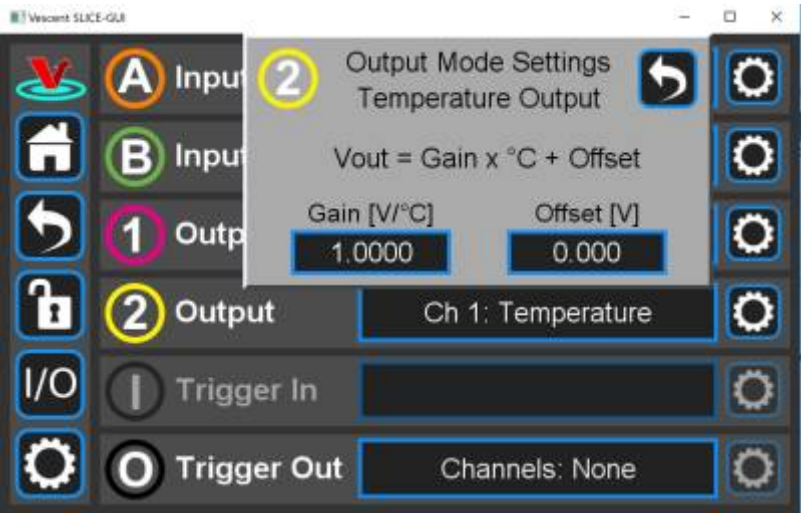


Fig. 33: Adjusting the Gain & Offset of Channel 2 Output

When the SLICE-QTC is programmed to deliver data to an output port, the data that is being delivered will be indicated on the Channel Detail screen as seen in [figure 34](#). The numeral 1 in the magenta circle in the upper right-hand corner of the Actual [°C] display field indicates that the temperature for CH 4 is being delivered to the front-panel I/O port ch 1.

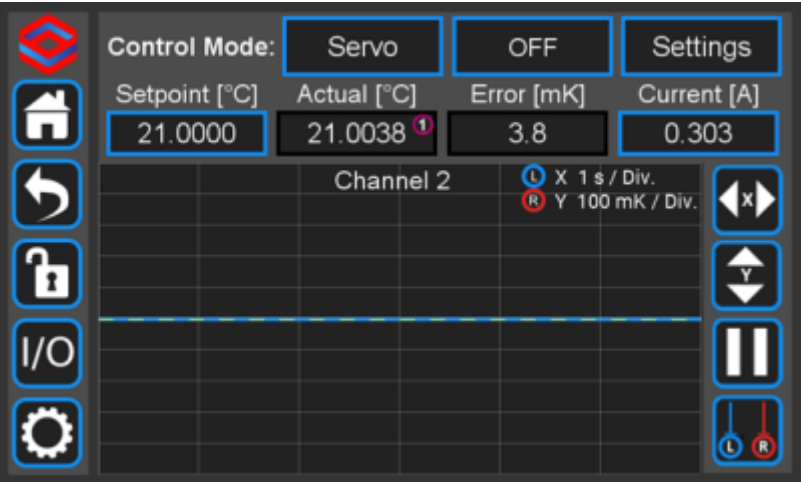


Fig. 34: CH 4 ΔT data is being delivered to front-panel I/O channel 1

| Choice            | Comment                                                                                           |
|-------------------|---------------------------------------------------------------------------------------------------|
| Off               | No data delivered to output channel                                                               |
| Temperature       | Actual temperature measured by thermistor                                                         |
| Temperature Error | Temperature error $\Delta T = T_{act} - T_{set}$ : Actual temperature minus set point temperature |
| Current Output    | Current being delivered to specified temperature control channel                                  |

Tab. 8: Front-panel ouput signals

Triggering

External control of the SLICE-QTC is accomplished via a TTL trigger.<sup>14)</sup> 0 to 0.8 V TTL is low and 2 to V<sub>cc</sub> is TTL high.

Trigger Out

The Trigger Out on the back panel of the SLICE-QTC can be forced to go high to alert an external device to a status change. To program the trigger, from any screen touch I/O > Trigger Out. You will be presented with the screen shown in figure 35. Select those events on the desired channels for which you want the trigger to go high. A logical OR is performed on the set of selected events to determine the state of the output trigger. In the example, the trigger will go high if the minimum temperature set for CH 1 is exceeded, the maximum temperature set for CH 2 is exceeded, the maximum slew rate set for CH 3 is exceeded, or when CH 4 reaches its set point temperature.

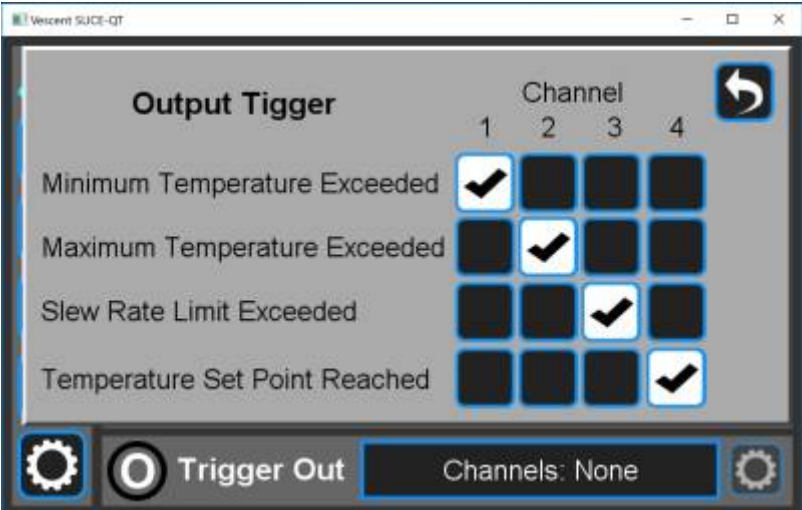


Fig. 35: Programming the rear-panel trigger out

Trigger In

The Trigger Input on the back panel of the SLICE-QTC can be used to turn any of the four temperature control channels on or off. The trigger can be configured from the I/O menu, under “Trigger In”. Select the “Channels” field and choose which channels you want to be affected by the trigger. Applying 5V

to Trigger Input will enable the servo for all selected channels, and applying 0V will disable them.

As of 2 August 2023 with up-to-date firmware, it is possible to invert the SLICE-QTC response to a trigger input. For instance, the SLICE-QTC can be programmed to either turn on or turn off a given channel when the input is trigger goes from low to high or vice versa. touch I/O > Trigger In and [figure 36](#) will be displayed.

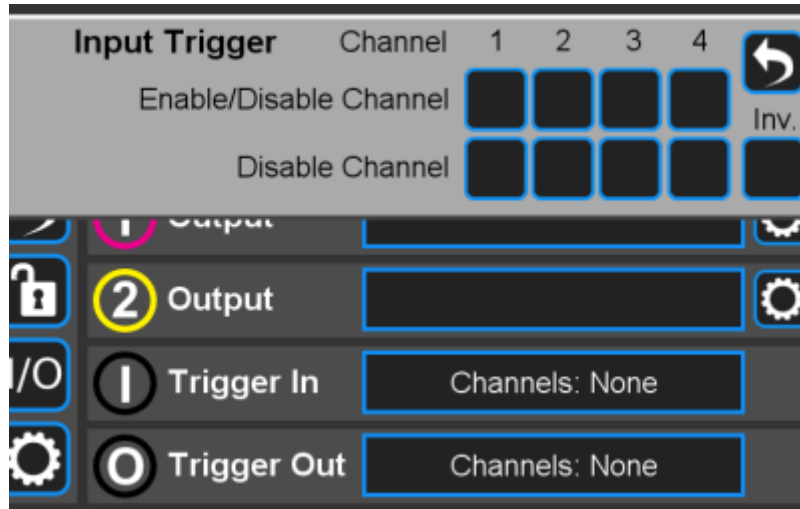


Fig. 36: Programming the rear-panel trigger out

Auto tune cannot be run for a channel which is under trigger control. Attempting to run an auto tune on a channel with a trigger input enabled will bring up a dialogue: “External input not compatible with auto tune. Turn external input off and continue?”. Pressing OK will disable the trigger for that channel and begin the auto tune. Pressing “Cancel” will dismiss the dialogue, leaving the trigger enabled, and the auto tune will cancel. Additionally, a trigger cannot be enabled on a channel with an active auto tune being run.

## Auto Tune

The auto tune feature of the SLICE-QTC allows the user to automatically find the PID temperature tuning parameters of their plant. It can be run from the single channel screen by pressing on the “Servo” button and choosing “Auto Tune”, then pressing “Start” from the “Next” drop down menu.

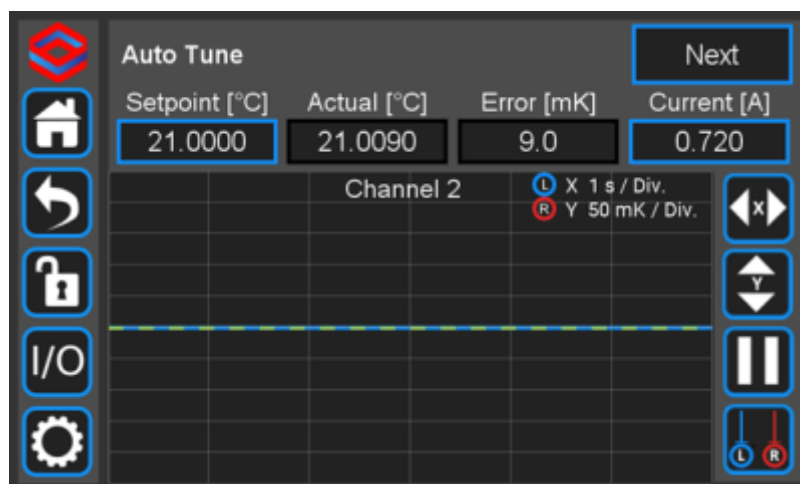


Fig. 37: Auto tune menu showing a tune ready to start

Note that there is also an “Auto Tune” option under the “Settings” menu. However, this will display the results of the most recent completed auto tune and cannot be used to start an auto tune. Once the auto tune starts, it will progress through several stages, and the user will be updated on its progress through a loading bar.

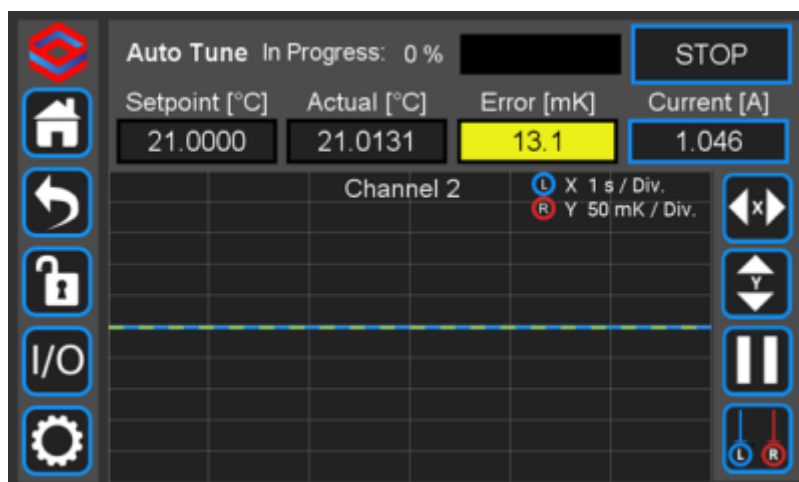


Fig. 38: An auto tune underway, showing the loading bar

Once the bar reaches 100%, the user is given the option to accept, review, or cancel the results.

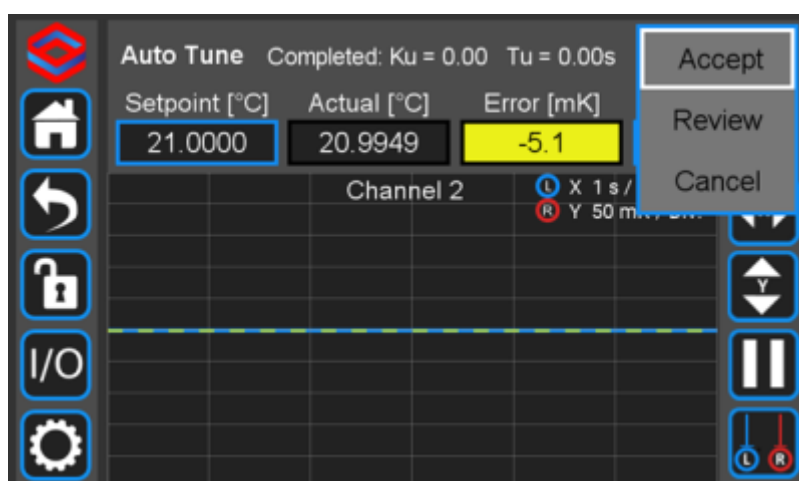


Fig. 39: A completed auto tune with the Accept/Review menu displayed

Accepting the tune will set the PID parameters of the temperature channel based on the calculated ultimate gain and period for the tuned plant. Reviewing the results will display a menu showing the PID parameters without setting them on the temperature channel.

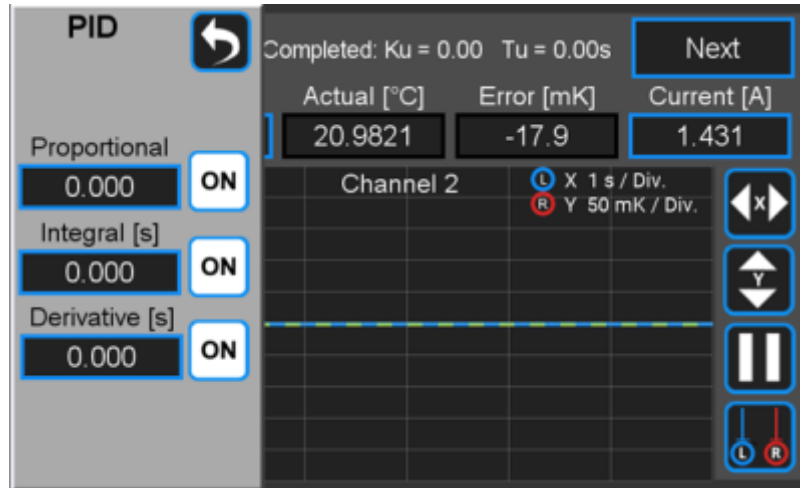


Fig. 40: The review menu for a completed auto tune

Canceling the result will exit the auto tune without setting the PID parameters on the temperature channel. If the results are canceled, they can still be seen in the “Settings” -> “Auto Tune” menu.

## System Settings

Touching the System Settings button on the Control Bar (figure 11) will open the System Settings screen as seen in figure 41.

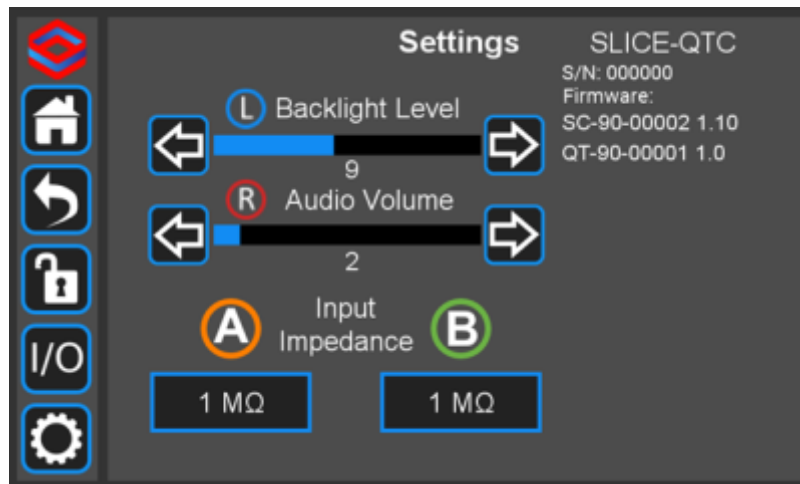


Fig. 41: User-programmable system settings

## User Interface Appearance

From this screen, adjustments to the brightness of the screen and the volume of the audio feedback can be made.

## Input Impedance

Change the input impedance of the two front-panel input ports. Select either 50  $\Omega$  or 1 M $\Omega$ .

**SLICE-QTC Serial Number**

The serial number (“S/N”) of the SLICE-QTC is displayed in the top right hand corner of the screen.

**SLICE-QT Firmware**

Current firmware versions are reported here.

| Firmware          | Version Level | Release Date |
|-------------------|---------------|--------------|
| System Controller | 2.22          | TBD          |
| QTC               | 2.51          | TBD          |

Tab. 9: Most recent firmware versions as of July 2022

From time to time, Vescent will upgrade the firmware for controlling the SLICE-QTC. The procedure to upgrade the firmware is given [here](#).

**Servo/Manual Modes**

Under most circumstances, the system will control the current to the transducer in order to minimize temperature fluctuations of your thermal plant. From time to time, it may also be desirable for the user to directly control the current to the transducer. This is done in Manual mode (open-loop control). To toggle between Servo and Manual modes, touch Servo on the Channel Detail screen ([figure 21](#)). In Servo mode (closed-loop control), it is possible to adjust the set point temperature, but not the current. In Manual mode, it is possible to adjust the current, but not the set point temperature. Caution should be exercised when using Manual mode as it is possible to create a thermal runaway condition where the transducer heats or cools without being limited.



In Manual mode, it may be possible for a thermal runaway condition to exist. Use caution when using Manual mode.

**Firmware Update**

From time to time, Vescent will upgrade the firmware for controlling the SLICE-QTC. The procedure to upgrade the firmware is given [here](#) and a video tutorial can be found [here](#).

**Serial API**

It is possible to control the SLICE-QTC through serial commands. Most functions of the SLICE-QTC which can be performed through the device-resident GUI are also available through the serial API.

These commands can be sent either through a terminal emulator such as PuTTY or Tera Term, or via a python script as shown in this [application note](#). Click here to access the [SLICE-QTC Serial API Guide](#).



Upgrading the SLICE-QTC firmware is not always necessary to use the Serial API. Check your installed firmware version in the settings menu against the most recent firmware version given [here](#).

Please contact [sales \[at\] vescent \[dot\] com](mailto:sales@vescent.com) for information.

## Maintenance

There are no user-serviceable parts inside this instrument. Refer all repairs to the manufacturer. Work performed by persons not authorized by Vescent may void the warranty.

1)

More cables may be purchased separately; order p/n 50-00005

2)

Located in power receptacle on rear panel

3)

Subject to change without notice

4)

with properly designed plant

5)

Nominal value 10 k $\Omega$  at room temperature. Precision at temperatures removed from room temperature can be improved by selecting a thermistor whose resistance is  $\sim 10$  k $\Omega$  near the target temperature.

6)

Plant-dependent; value specified for D2-100 laser

7)

User-distributable over four channels

8)

Subject to 40 W overall maximum

9)

automatically adjusted

10)

See [table 2](#) for acceptable input ranges

11)

[Four-pin DIN connector](#)

12)

In some early versions of the SLICE-QTC, the order of these connectors is reversed.

13)

[Optimum Settings for Automatic Controllers](#), by J.G. Zieger and N. B. Nichols and Wikipedia

14)

[https://en.wikipedia.org/wiki/Logic\\_level](https://en.wikipedia.org/wiki/Logic_level)

From:

<https://www.vescent.com/manuals/> - **Product Manuals**

Permanent link:

<https://www.vescent.com/manuals/doku.php?id=slice:qt>

Last update: **2024/10/03 17:30**

